



ESPADA

TOPLESS TOWER CRANE


www.espada-tr.com

EST6520-10



ESPADA

EST6520-10

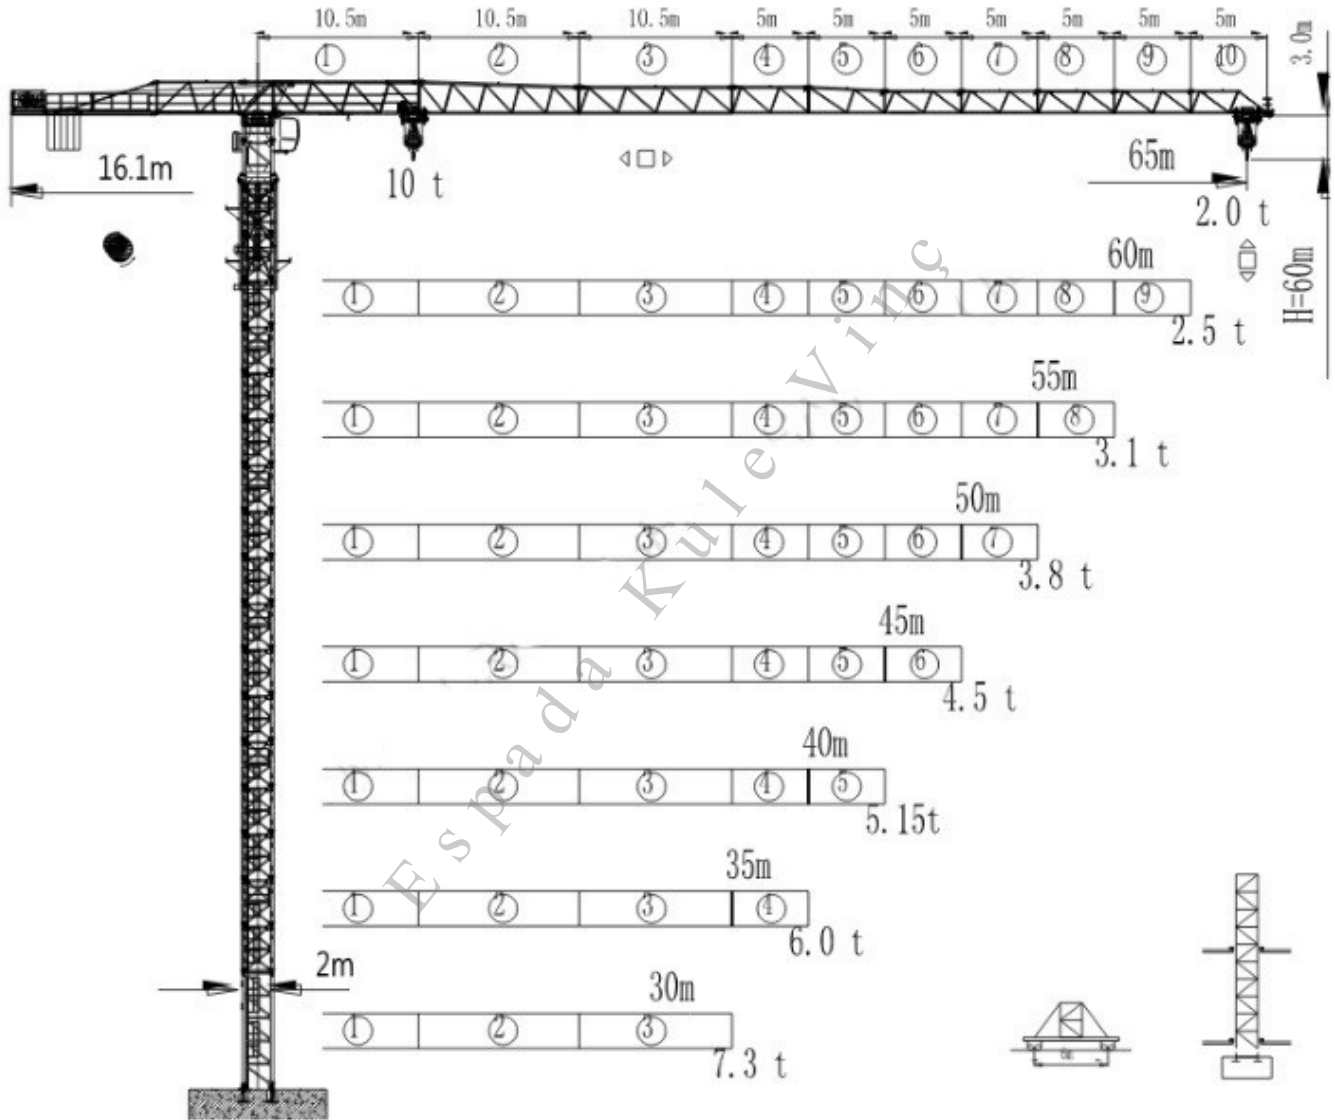




Loading Diagrams


	Fall	R(Cmax) m	C(max) t	10.0	15.0	20.0	25.0	30.0	35.0	40.0	45.0	50.0	55.0	60.0	65.0
65m		18.50	10.00	10.00	10.00	9.13	7.03	5.63	4.63	3.87	3.29	2.82	2.44	2.12	1.85
		33.70	5.00	5.00	5.00	5.00	5.00	5.00	4.77	4.02	3.44	2.97	2.59	2.27	2.00
60m		19.70	10.00	10.00	10.00	9.82	7.58	6.09	5.02	4.22	3.60	3.10	2.69	2.35	
		35.90	5.00	5.00	5.00	5.00	5.00	5.00	5.00	4.37	3.75	3.25	2.84	2.50	
55m		20.90	10.00	10.00	10.00	10.00	8.16	6.57	5.43	4.58	3.92	3.39	2.95		
		38.20	5.00	5.00	5.00	5.00	5.00	5.00	5.00	4.73	4.06	3.53	3.10		
50m		22.10	10.00	10.00	10.00	10.00	8.69	7.01	5.81	4.91	4.21	3.65			
		40.30	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	4.36	3.80			
45m		22.60	10.00	10.00	10.00	10.00	8.94	7.22	5.99	5.07	4.35				
		41.40	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	4.50				
40m		22.90	10.00	10.00	10.00	10.00	9.07	7.33	6.09	5.15					
		40.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00					
35m		22.70	10.00	10.00	10.00	10.00	8.96	7.23	6.00						
		35.00	5.00	5.00	5.00	5.00	5.00	5.00	5.00						
30m		22.00	10.00	10.00	10.00	10.00	9.04	7.30							
		30.00	5.00	5.00	5.00	5.00	5.00	5.00							

Anchorage

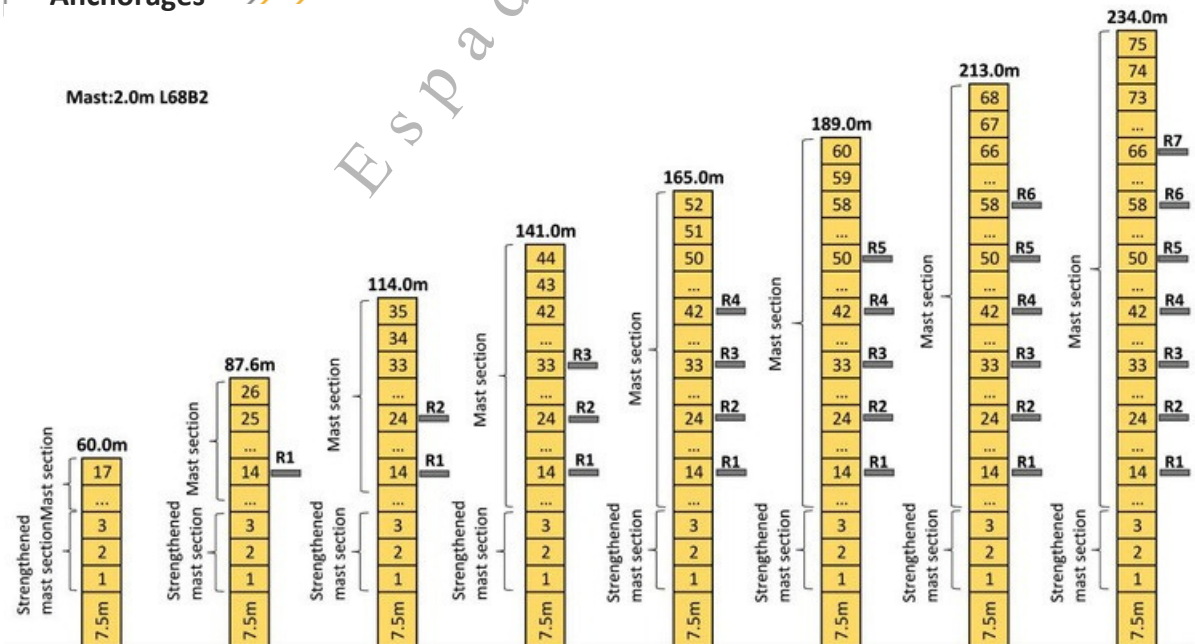



Mast-Reaction

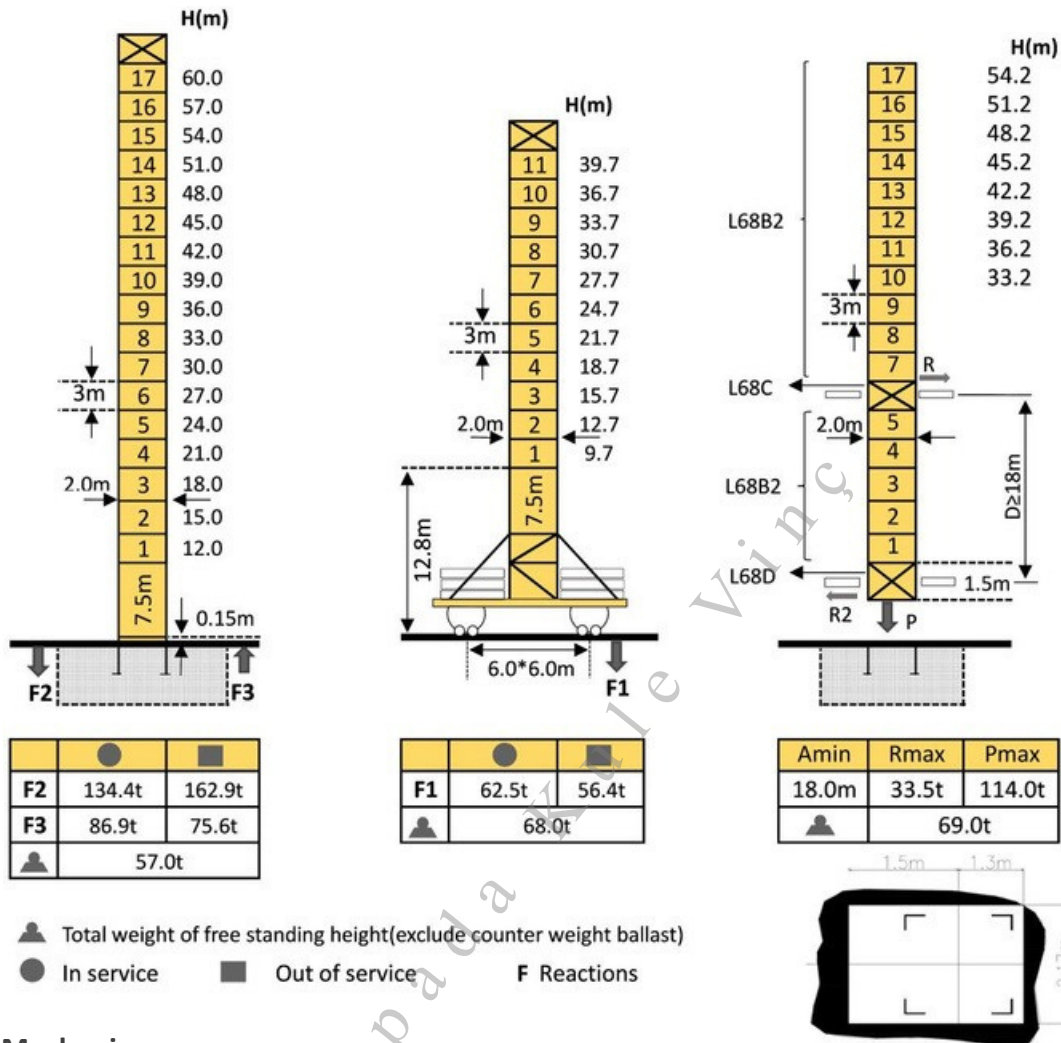

Mechanisms

Items	Mechanisms	Speed/Hoist weight				Rope Capacity	Motor(KW)
		M/min	t	M/min	t		
Hoisting	55RCS25					500m > 500m*	40
		0-40	5.00	0-22	10.00		
		0-80	2.50	0-44	5.00		
	45JLF25	0-36	5.00	0-21	10.00		45
		0-72	2.50	0-42	5.00		
		0-108	1.25	0-54	2.50		
Trolley	120JXL	0-63m/min					5.5kw/120N.m
Slewing	RCV95	0-0.7rpm					2*5.5kw/2*95N.m
Traveling	RT443	12.5-25m/min					4*5.2
Main electrical components: Schneider (Frequency converter, Contactor,Relay)							